

Exhaust Pipe/Muffler Inspection


Check the mounting bolts and exhaust pipe joint nuts for tightness.

Check the exhaust pipe and mufflers for cracks or deformation.

A damaged exhaust pipe and mufflers may reduce engine performance.

Muffler Removal


1. Remove the seat (page 34).
2. Remove the side covers (1) and air cleaner housing covers (2) by removing the bolts (3).

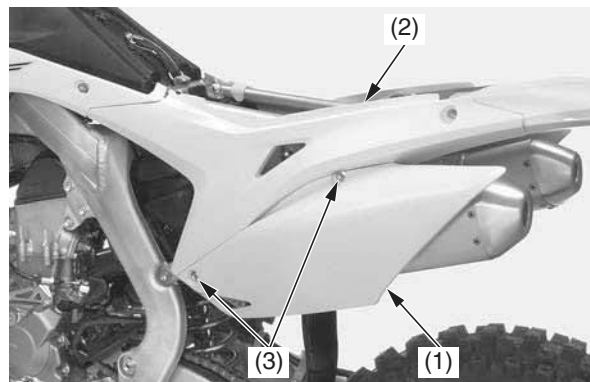

- (1) side covers (3) bolts
(2) air cleaner housing covers


The procedure is the same for the both right and left side.

3. Loosen the left muffler clamp bolt (4).

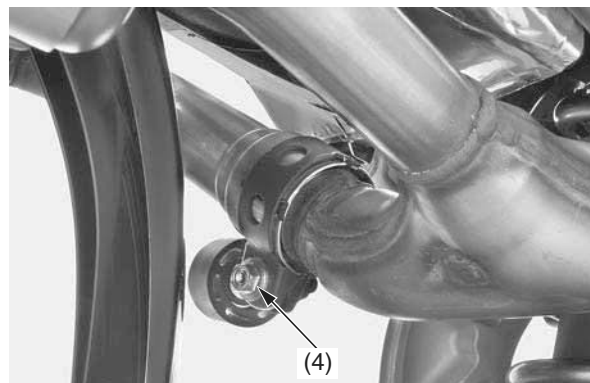

- (4) left muffler clamp bolt

4. Remove the left muffler mounting bolt (5), washer (6) and left muffler (7).

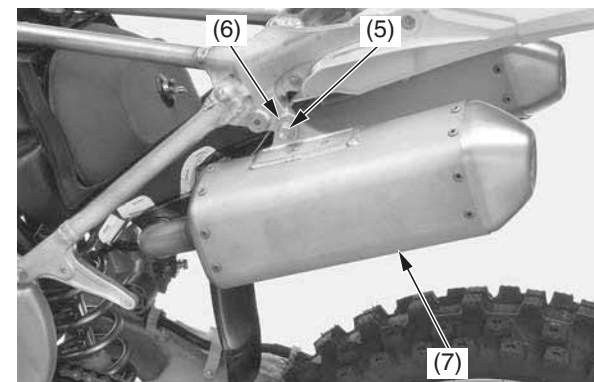

- (5) left muffler mounting bolt
(6) washer
(7) left muffler

(cont'd)