

Index

A

- accessories 3
- adjustments,
 - chassis..... 151
 - control freeplay 59, 62
 - for competition 133
 - gearing 152
 - personal fit..... 154
 - steering damper 149
 - suspension, front..... 135
 - tire selection, track condition 153
- after competition maintenance 32
- air cleaner 56
- air pressure,
 - balance chamber 139
 - inner chamber 137
 - outer chamber 138
 - right front suspension 135
 - tires 116
- apparel, protective 2
- appearance care 130
- authorized manuals..... 174

B

- balance chamber air pressure 139
- basic operation..... 15
- before riding 11
- between motos & practice maintenance 30
- brakes,
 - fluid level..... 112
 - lever, front adjustment..... 111
 - pad wear 114
 - pedal height 111
- break-in guidelines 19

C

- capacity, fuel 40
- care, appearance 130
- chain drive..... 118
- chassis adjustments 151
- cleaner, air 56
- cleaning, appearance care 130
- clutch system, adjustment 62
- competition logbook 168
- consumer information 173
- contacting Honda 175
- controls..... 5
- coolant..... 54
- customer service..... 173
- cylinder system 79

D

- damping adjustments,
 - front..... 135, 136
 - rear 141
 - steering damper..... 149
- dealer, your Honda..... 176
- diagram, wiring 172
- drive chain..... 118

E

- engine,
 - flooded..... 17
 - idle speed..... 61
 - lacks power..... 159
 - mode select button..... 134
 - number..... 162
 - oil..... 49
 - starting 17
 - stop button 18
 - stopping 18
 - won't start..... 159
- environment, protecting..... 17, 158

F

- filter,
 - air..... 56
 - fuel pump..... 44
 - oil..... 50
- flooded engine, starting 17
- fork,
 - front suspension inspection 87
 - oil recommendation..... 91
- front brake lever adjustment..... 111
- front suspension maintenance..... 135
- fuel..... 40
- fuel,
 - line inspection..... 40
 - line replacement 41
 - oxygenated..... 167
 - pump filter 44
 - refueling..... 40
 - system..... 40
 - tank capacity..... 40