

ADJUSTMENTS FOR COMPETITION .. 125	TIPS.....143	INDEX 170
Engine Mode Select Button 126	Transporting Your Motorcycle 144	QUICK REFERENCE
Current Mode 126	Storing Your Honda 145	
Mode Selection..... 126	Preparation for Storage 145	
Front Suspension Adjustments 127	Removal from Storage 145	
Front Suspension Air Pressure 127	You & the Environment 146	
Front Suspension Damping 128	Troubleshooting 147	
Fork Springs 128		
Fork Oil Adjustment..... 129	TAKING CARE OF THE UNEXPECTED..149	
Rear Suspension Adjustments 130	If a Fuse Blows 150	
Rear Suspension Spring Pre-Load..... 130	If Your Battery Is Low (or Dead) 151	
Rear Suspension Damping 131		
Rear Suspension Race Sag 132	TECHNICAL INFORMATION.....153	
Suspension Adjustments for Track	Vehicle Identification 154	
Conditions 134	Serial Numbers 154	
Suspension Adjustment Guidelines 135	Specifications 155	
Tuning Tips 138	Torque Specifications 156	
Spark Plug Reading..... 138	Nuts, Bolts, Fasteners 156	
Chassis Adjustments 139	Oxygenated Fuels 159	
Rear End..... 139	Competition Logbook 160	
Fork Height/Angle..... 139	Optional Parts List 162	
Wheelbase 139	Spare Parts & Equipment 163	
Gearing 140	Spare Parts 163	
Tire Selection for Track Conditions 141	General Tools..... 163	
Personal Fit Adjustments 142	Honda Special Tools..... 163	
Control Positioning 142	Chemical Products 163	
Handlebar Position, Width & Shape 142	Other Products 163	
	Wiring Diagram 164	
	CONSUMER INFORMATION165	
	Authorized Manuals 166	
	Contacting Honda 167	
	Your Honda Dealer 168	
	The Honda Rider's Club (USA only) 169	