

Read this section carefully before you ride. It presents the location of the basic controls on your CRF.

Operation Component Locations .....	6
MIL (Malfunction Indicator Lamp) .....	7
MIL Blink Pattern .....	7
Current DTC/Freeze DTC .....	7
Circuit Inspection .....	8
DTC Index .....	9
Mode Indicator .....	10