

# Maintenance Schedule

Perform the *Pre-ride Inspection* (page 13) at each scheduled maintenance period.

I: Inspect and Clean, Adjust, Lubricate or Replace if necessary. C: Clean. R: Replace. A: Adjust. L: Lubricate.

ITEMS	FREQUENCY	NOTE	Each race or about 2.5 hours	Every 3 races or about 7.5 hours	Every 6 races or about 15.0 hours	Every 9 races or about 22.5 hours	Every 12 races or about 30.0 hours	Ref. Page
FUEL LINE		(NOTE 6)	I				R	41
FUEL PUMP FILTER		(NOTE 6)					R	45 – 49
THROTTLE OPERATION			I					60
AIR FILTER		(NOTE 1)	C					56
CRANKCASE BREATHER			I					58
SPARK PLUG			I					67
VALVE CLEARANCE/DECOMPRESSOR SYSTEM		(NOTE 4)			I			68 – 78
ENGINE OIL		(NOTE 3) (NOTE 5)	I		R			51
ENGINE OIL FILTER		(NOTE 3)			R			52
ENGINE IDLE SPEED			I					61
PISTON AND PISTON RINGS					R			79
PISTON PIN					R			82
RADIATOR COOLANT		(NOTE 2)	I					54
COOLING SYSTEM			I					55
DRIVE CHAIN			I, L	R				112
DRIVE CHAIN SLIDER			I					112
DRIVE CHAIN ROLLER			I					113
DRIVE SPROCKET			I					114
DRIVEN SPROCKET			I					114
BRAKE FLUID		(NOTE 2)	I					106
BRAKE PADS WEAR			I					108
BRAKE SYSTEM			I					105
CLUTCH SYSTEM		(NOTE 5)	I					62
CONTROL CABLES			I, L					119
EXHAUST PIPE/MUFFLER			I					115
SUSPENSION			I					88, 104
SWINGARM/SHOCK LINKAGE				L				29, 104
FORK OIL EXCEPT DAMPER		(NOTE 3)		R				91, 92, 129
FORK OIL DAMPER						R		98 – 101
NUTS, BOLTS, FASTENERS			I					120, 156 – 158
WHEELS/TIRES			I					109 – 111
STEERING HEAD BEARINGS						I		119

WE RECOMMEND THESE ITEMS BE SERVICED BY REFERRING TO AN OFFICIAL HONDA SERVICE MANUAL.

This maintenance schedule is based upon average riding condition. Machine subjected to severe use require more frequent servicing.

- NOTE: 1. Clean after every moto for dusty riding condition.  
 2. Replace every 2 years. Replacement requires mechanical skill.  
 3. Replace after the first break-in ride.  
 4. Inspect after the first break-in ride.  
 5. Replace the engine oil, if the clutch discs and plates are replaced.  
 6. Replace every year.