

G

gap, spark plug 67
 gasohol..... 159
 gasoline..... 41
 gearing 140
 guidelines,
 suspension adjustment..... 135

H

handlebar inspection..... 119
 Honda,
 contacting 167
 Rider’s Club 169
 service manual..... 166
 your dealer..... 168

I

identification, vehicle 154
 idle knob, fast 17, 61
 idle speed, engine 61
 indicator,
 circuit inspection 8
 DTC index 9
 MIL blink 7
 mode 10, 126
 inspection, pre-ride 13
 instruments 5

L

labels, safety 4
 logbook, competition..... 160

M

maintenance,
 after competition 31
 before & after competition..... 30
 between motos & practice..... 30
 component locations 32
 general competition..... 26
 importance 22
 safety 23
 schedule 24
 manual, service 166
 mode indicator 10, 126
 modifications..... 3

O

oil,
 engine..... 51
 fork..... 91
 operating instructions..... 15
 operation component locations 6
 optional,
 parts list..... 162
 sprockets 140
 oxygenated fuels 159

P

pads, brake 108
 parts, optional..... 162
 personal fit adjustments 142
 ping, engine..... 41
 piston, piston rings, piston pin 79
 plug, spark..... 67
 pre-load, rear suspension 130
 pre-ride inspection 13
 protective apparel..... 2

R

rear suspension adjustment..... 130
 Rider’s Club, Honda (USA only) 169
 riding,
 apparel 2
 basic operation..... 15
 before..... 11
 important safety information 2
 safety precautions 2

S

safety,
 a few words about..... Safety Messages
 important information..... 2
 important precautions 2
 labels..... 4
 maintenance..... 23
 riding precautions 16
 schedule, maintenance..... 24
 seat 33
 serial numbers..... 154
 service,
 customer 165
 manuals..... 166
 spare parts 163
 spark knock..... 41
 spark plug,
 maintenance..... 67
 reading 138
 specifications 155
 spring pre-load, rear suspension 130
 starting,
 engine 17
 troubleshooting 147
 steering stem inspection 119
 stopping engine..... 18
 storage..... 145
 subframe 37

(cont’d)