Additional Maintenance Procedures


Nuts, Bolts, Fasteners

Check and tighten nuts, bolts, and fasteners before every outing.

ENGINE

Item		Torque		
		lbf∙ft	N⋅m	kgf⋅m
1	Cylinder head cover socket bolts	7	10	1.0
2	Exhaust pipe joint nuts	15	21	2.1
3	Water pump cover bolts	7	10	1.0
4	Coolant drain bolt	7	10	1.0
5	Oil filter cover bolts	7	10	1.0
6	Engine oil drain bolt	12	16	1.6
7	Clutch cover A bolts	7	10	1.0
8	Clutch cover B bolt	7	10	1.0
9	Clutch cover C bolts	7	10	1.0
10	Cylinder bolt	7	10	1.0
11	Cylinder head A bolts	7	10	1.0
12	Cylinder head B bolts	35	48	4.9
13	Drive sprocket bolt	23	31	3.2
14	Crankshaft hole cap	11	15	1.5
15	Timing hole cap	4.4	6.0	0.6

RIGHT SIDE

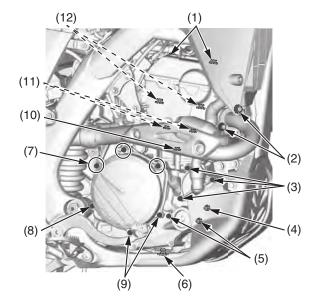


- (1) cylinder head cover socket bolts(2) exhaust pipe joint nuts(3) water pump cover bolts(4) coolant drain bolt

- (5) oil filter cover bolts
 (6) engine oil drain bolt
 (7) clutch cover A bolts
 (8) clutch cover B bolt

- (9) clutch cover C bolts

- (10) cylinder bolt (11) cylinder head A bolts (12) cylinder head B bolts

LEFT SIDE

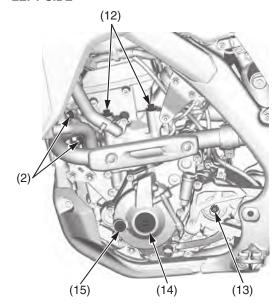

- (13) drive sprocket bolt (14) crankshaft hole cap
- (15) timinghole cap