

This section shows the location of all indicators, and controls you would normally use before or while riding your motorcycle.

The items listed on this page are described in this section. Instructions for other components are presented in other sections of this manual where they will be most useful.

Operation Component Locations	8
Indicators & Displays	9
Multi-function Display	10
Speedometer.....	12
Odometer/Tripmeter A & B.....	12
Fuel Mileage Meter.....	12
Digital Clock Setting	13
Backlight Brightness Adjustment	13
Changing the Speed and Mileage Unit	14
Changing the Fuel Mileage Unit.....	14
Controls & Features	15
Ignition Switch.....	15
Start Button	15
Engine Stop Switch.....	15
Headlight Dimmer Switch	15
Passing Light Control Switch	15
Turn Signal Switch	15
Horn Button	15