

Maintenance Schedule

MAINTENANCE SCHEDULE

Perform the *Pre-ride Inspection* (page 19) at each scheduled maintenance period.

I: Inspect and Clean, Adjust, Lubricate or Replace if necessary. C: Clean. R: Replace. A: Adjust. L: Lubricate.

ITEMS	FREQUENCY	WHICHEVER COMES FIRST ➔	REGULAR MAINTENANCE INTERVAL (NOTE 1)								Regular Replace	Refer to Page:	
			INITIAL MAINTENANCE		600	1200	1800	2400	3000	3600			20000
			mi	100									
		➔	Km	150	1000	2000	3000	4000	5000	6000	32000		
		NOTE	MONTH	1	4	8	12	16	20	24			
* FUEL LINE							I			I		61	
** FUEL FILTER							R			R		63 – 67	
* THROTTLE OPERATION							I			I		79	
* AIR CLEANER		(NOTE 2)		C	C	C	C	C	C	C		3 years 75, 76	
CRANKCASE BREATHER		(NOTE 3)		I	I	I	I	I	I	I		77	
SPARK PLUG							I			I		86	
* VALVE CLEARANCE							I			I		87 – 95	
ENGINE OIL				R	R	R	R	R	R	R		70, 71	
ENGINE OIL FILTER				R	R	R	R	R	R	R		70, 71	
* DECOMPRESSOR SYSTEM							I			I		92	
** ENGINE IDLE SPEED			I	I	I	I	I	I	I	I		80	
** INTAKE/EXHAUST VALVE										R		–	
** PISTON AND PISTON RINGS										R		98 – 100	
** PISTON PIN										R		98 – 100	
** CRANKSHAFT										R		–	
** CRANKSHAFT BEARING										R		–	
** TRANSMISSION										I		–	
** CAM CHAIN TENSIONER LIFTER										R		–	
RADIATOR COOLANT		(NOTE 6)					I			I		3 years 72, 74	
* COOLING SYSTEM			I	I	I	I	I	I	I	I		73	
* SECONDARY AIR SUPPLY SYSTEM							I			I		–	
* EVAPORATIVE EMISSION CONTROL SYSTEM		(NOTE 3)								I		–	
DRIVE CHAIN		(NOTE 4)	I, L				(I, L: every 300 mi (500 km) or 3 months)					130 – 132	
DRIVE CHAIN SLIDER				I	I	I	I	I	I	I		130	
BRAKE FLUID		(NOTE 6)		I	I	I	I	I	I	R		2 years 123, 124	
BRAKE PADS WEAR				I	I	I	I	I	I	I		125	
BRAKE SYSTEM			I	I	I	I	I	I	I	I		122	
BRAKE LIGHT SWITCH				I	I	I	I	I	I	I		125	
* HEADLIGHT AIM							I			I		140	
CLUTCH SYSTEM			I				I			I		81 – 82	
SIDE STAND							I			I		129	
* SUSPENSION							I			I		144, 146	
* SPARK ARRESTER		(NOTE 5)		(C: every 1,000 mi (1,600 km) or every 100 operating hours)								135	
* NUTS, BOLTS, FASTENERS		(NOTE 4)	I				I			I		137, 181 – 183	
** WHEELS/TIRES		(NOTE 4)	I	I	I	I	I	I	I	I		126 – 128	
** STEERING HEAD BEARINGS			I				I			I		136	

*Should be serviced by your dealer, unless the owner has proper tools and service data and is mechanically qualified. Refer to the official Honda Service Manual (page 194).

**In the interest of safety, we recommended these items be serviced only by your dealer.

NOTES:1. At higher odometer reading. Repeat at the frequency interval established here.

2. Service more frequently when riding in unusually wet or dusty areas.

3. Service more frequently when riding in rain or at full throttle.

4. Service more frequently when riding OFF-ROAD.

5. USA only.

6. Replacement requires mechanical skill.