


Fuel Tank (CRF450R/RWE)

8. Check for interference between the frame and tank, and check the cushion rubbers (14) on both sides of the frame for hardening or cracks.

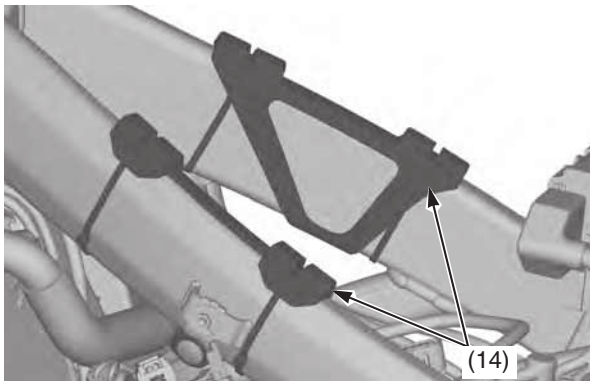


(14) cushion rubbers

NOTICE

*Do not ride your CRF if the cushion rubbers have been removed.
It may cause fuel tank cracking.*


Installation

1. Install the fuel tank (1) on the frame.
2. Install and tighten the washers (2) and fuel tank bolts (3) to the specified torque:
7 lbf-ft (10 N·m, 1.0 kgf·m)

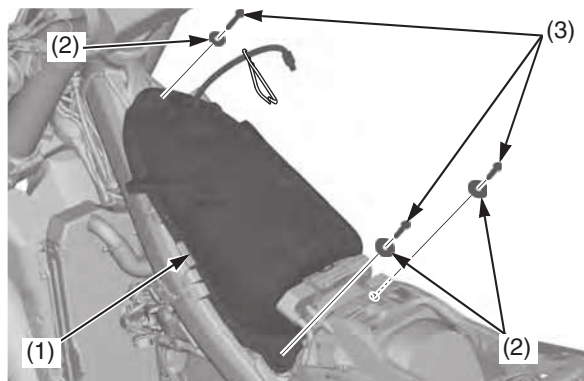

(1) fuel tank
(2) washers
(3) fuel tank bolts


3. Put the breather tube (4) in the steering stem nut (5).
4. Remove the hose clamp (6) from the breather tube.

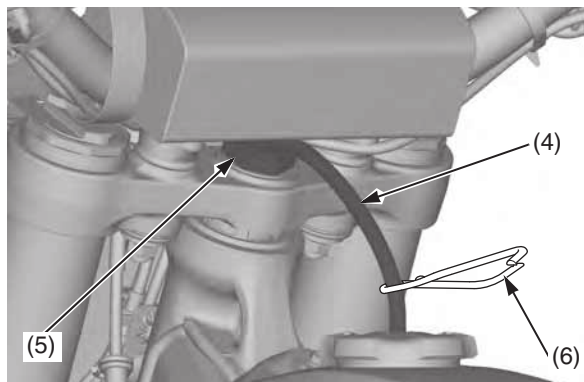

(4) breather tube
(5) steering stem nut
(6) hose clamp

5. Slide the shroud (7) toward the down so that the shroud tab (8) and the slot (9) on the air cleaner housing cover (10) is aligned.
6. Install the shroud C bolt (11), B bolt (12) and shroud A bolt (13).
Tighten the shroud A and B bolts to the specified torque:
7 lbf-ft (10 N·m, 1.0 kgf·m)
Tighten the shroud C bolt to the specified torque:
3.8 lbf-ft (5.2 N·m, 0.5 kgf·m)

The right and left shrouds can be installed in the same manner.

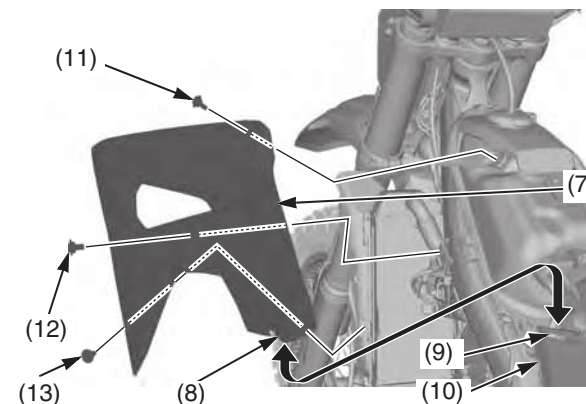

(7) shroud
(8) tab
(9) slot
(10) air cleaner housing cover
(11) shroud C bolt
(12) shroud B bolt
(13) shroud A bolt

7. Install the seat (page 34).