


Fuel System

Fuel Filter

The fuel filter is mounted on the bottom left side of the fuel tank. Dirt accumulated in the filter will restrict the flow of the fuel to the carburetor.


To service the fuel filter:

1. Drain the fuel from the fuel tank into an approved petrol container.
2. Remove the fuel tank (page 37).
3. Remove the fuel joint (1) from fuel tank by removing the bolts (2).

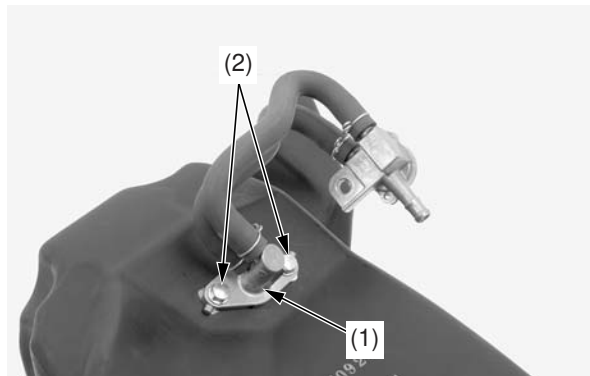

(1) fuel joint (2) bolts

4. Wash the fuel filter (3) in high flash-point cleaning solvent.
5. Check that the O-ring (4) is in good condition and install it onto the fuel joint. Reassemble the fuel joint in the reverse order of removal.
6. Install the fuel tank (page 38) and refill the fuel. Turn the fuel valve to ON or RES; check for leaks.

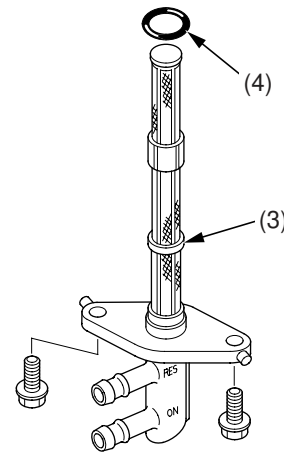

(3) fuel filter

(4) O-ring