


## Headlight & Taillight

### Headlight Aim

The headlight aim can be raised or lowered. Turn the adjusting screw (1) clockwise to move the headlight up or turn the adjusting screw counterclockwise to move the headlight down to proper adjustment.

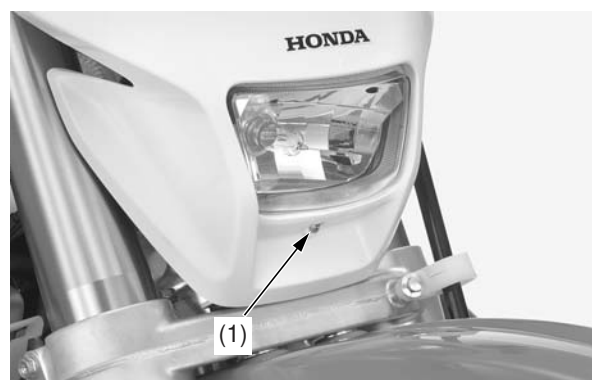

(1) adjusting screw

### Taillight

The taillight uses LED illumination. If the taillight does not function properly, see your Honda dealer for service.

This model is equipped with an electric starter and battery for easy engine starting.

There is a possibility of damage to the lighting system if the battery is carelessly removed.

Never kick-start the engine without the battery connected.

If it becomes necessary to kick-start the engine with the battery removed, remove the relays to the battery to prevent damage to the lighting.