

## MAINTENANCE SCHEDULE - REGULAR OFF-ROAD USE (NON-COMPETITION)

Perform the *Pre-ride Inspection* (page 17) at each scheduled maintenance period.

I: Inspect and Clean, Adjust, Lubricate or Replace if necessary. C: Clean. R: Replace. A: Adjust. L: Lubricate.

ITEMS	FREQUENCY	WHICHEVER COMES FIRST ⇒	REGULAR MAINTENANCE INTERVAL					Refer to Page:	
			mi	100	600	1200	1800		2400
			Km	150	1000	2000	3000		4000
		NOTE	MONTH	1	6	12	18	24	
*	FUEL LINE								55
**	FUEL PUMP FILTER						R		57 – 61
*	THROTTLE OPERATION								73
	AIR CLEANER	(NOTE 1) (NOTE 3)			C	C	C	C	69, 70
	CRANKCASE BREATHER								71
	SPARK PLUG								80
*	VALVE CLEARANCE								81 – 89
	ENGINE OIL			R	R	R	R	R	64, 65
	ENGINE OIL FILTER			R	R	R	R	R	64, 65
*	DECOMPRESSOR SYSTEM								86
**	ENGINE IDLE SPEED								74
	RADIATOR COOLANT	(NOTE 2)						R	66, 68
*	COOLING SYSTEM								67
*	SECONDARY AIR SUPPLY SYSTEM								–
	EVAPORATIVE EMISSION CONTROL SYSTEM								–
	DRIVE CHAIN	(NOTE 1)		I, L	(I, L: every 300 mi (500 km) or 3 months)				124 – 126
	DRIVE CHAIN SLIDER								124
	BRAKE FLUID	(NOTE 2)							117, 118
	BRAKE PADS WEAR								119
	BRAKE SYSTEM								116
*	HEADLIGHT AIM								135
	CLUTCH SYSTEM								75 – 76
	SIDE STAND								123
*	SUSPENSION								99, 115
*	SPARK ARRESTER				(C: every 1,000 mi (1,600 km) or every 100 operating hours)				129
*	NUTS, BOLTS, FASTENERS								132, 170 – 172
**	WHEELS/TIRES								120 – 122
**	STEERING HEAD BEARINGS								131

\*Should be serviced by your dealer, unless the owner has proper tools and service data and is mechanically qualified. Refer to the official Honda Service Manual (page 182).

\*\*In the interest of safety, we recommended these items be serviced only by your dealer.

NOTES:1.Service more frequently when ridden in wet or dusty conditions.

2. Replace every 2 years. Replacement requires mechanical skill.

3. Replace every 3 years.