


Side Cover

Refer to *Important Safety Precautions* on page 31.

Removal

1. Remove the seat (page 43).
2. Remove the side cover (1) by removing the bolts (2).

The right and left side covers can be removed in the same manner.

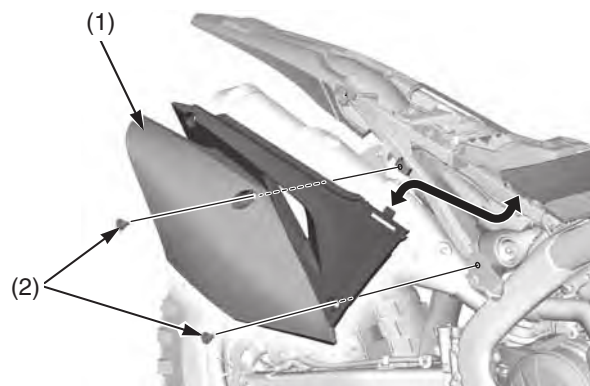


(1) side cover

(2) bolts

Installation

1. Install the side cover (1), and then tighten the bolts (2) to the specified torque:
7 lbf·ft (10 N·m, 1.0 kgf·m)

The right and left side covers can be installed in the same manner.

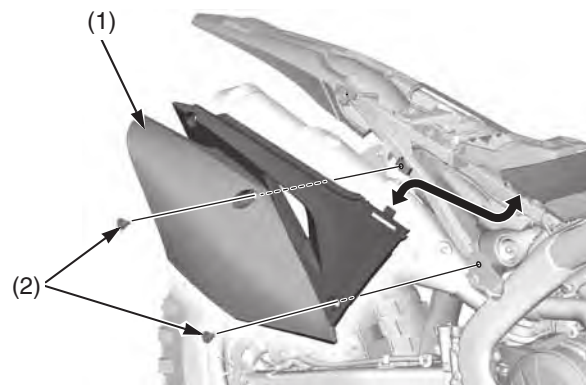

(1) side cover

(2) bolts

2. Install the seat (page 43).