

Maintenance Schedule

MAINTENANCE SCHEDULE - REGULAR OFF-ROAD USE (NON-COMPETITION)

Perform the *Pre-ride Inspection* (page 17) at each scheduled maintenance period.

I: Inspect and Clean, Adjust, Lubricate or Replace if necessary. C: Clean. R: Replace. A: Adjust. L: Lubricate.

ITEMS	FREQUENCY	WHICHEVER COMES FIRST ⇒ NOTE	INITIAL MAINTENANCE		REGULAR MAINTENANCE INTERVAL					Refer to Page:	
			mi	100	600	1200	1800	2400			
			Km	150	1000	2000	3000	4000			
		MONTH	1	6	12	18	24				
*	FUEL LINE									55	
**	FUEL PUMP FILTER							R		57 – 61	
*	THROTTLE OPERATION									73	
	AIR CLEANER	(NOTE 1) (NOTE 3)			C	C	C	C		69, 70	
	CRANKCASE BREATHER									71	
	SPARK PLUG									80	
*	VALVE CLEARANCE									81 – 89	
	ENGINE OIL		R	R	R	R	R	R		64, 65	
	ENGINE OIL FILTER		R	R	R	R	R	R		64, 65	
*	DECOMPRESSOR SYSTEM									86	
**	ENGINE IDLE SPEED									74	
	RADIATOR COOLANT	(NOTE 2)						R		66, 68	
*	COOLING SYSTEM									67	
*	SECONDARY AIR SUPPLY SYSTEM									–	
	EVAPORATIVE EMISSION CONTROL SYSTEM									–	
	DRIVE CHAIN	(NOTE 1)	I, L	(I, L: every 300 mi (500 km) or 3 months)						124 – 126	
	DRIVE CHAIN SLIDER									124	
	BRAKE FLUID	(NOTE 2)								117, 118	
	BRAKE PADS WEAR									119	
	BRAKE SYSTEM									116	
*	HEADLIGHT AIM									135	
	CLUTCH SYSTEM									75 – 76	
	SIDE STAND									123	
*	SUSPENSION									99, 115	
*	SPARK ARRESTER				(C: every 1,000 mi (1,600 km) or every 100 operating hours)						129
*	NUTS, BOLTS, FASTENERS									132, 170 – 172	
**	WHEELS/TIRES									120 – 122	
**	STEERING HEAD BEARINGS									131	

*Should be serviced by your dealer, unless the owner has proper tools and service data and is mechanically qualified. Refer to the official Honda Service Manual (page 182).

**In the interest of safety, we recommended these items be serviced only by your dealer.

NOTES: 1. Service more frequently when ridden in wet or dusty conditions.

2. Replace every 2 years. Replacement requires mechanical skill.

3. Replace every 3 years.