

Starter Motor Operates But Engine Does Not Start

Check the following items:

- Check the correct engine starting sequence ➔ P. 22
- Check that there is petrol in the fuel tank
- Check if the PGM-FI malfunction indicator lamp (MIL) is on
 - ▶ If the indicator light is on, contact your dealer as soon as possible.

Starter Motor Does Not Operate

Check the following items:

- Check for a blown fuse ➔ P. 92
 - Check for a loose battery connection or battery terminal corrosion ➔ P. 37, 47
 - Check the condition of the battery ➔ P. 87
- If the problem continues, have your motorcycle inspected by your dealer.