


Rear Turn Signal Bulb

4. Install a new bulb and parts in the reverse order of removal.
 - Install the socket by aligning its "△" mark with the round projection on the brake/tail light housing. Then turn it clockwise until the "△" mark is aligned with the triangular projection on the brake/tail light housing.
5. Close the seat.

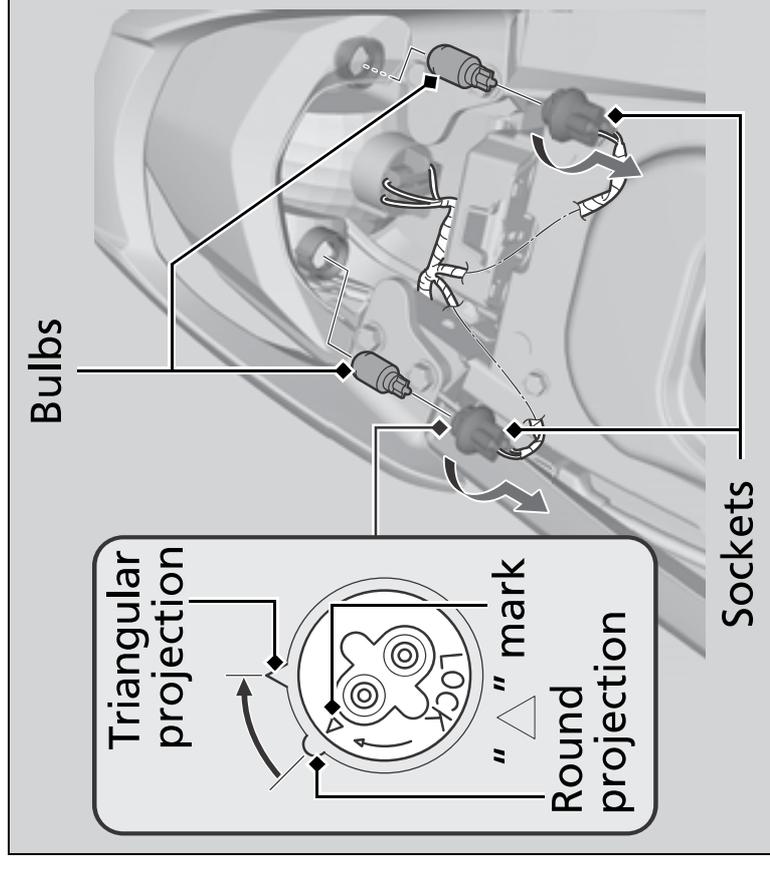

1. Open the seat. [► P. 28](#)
2. Turn the socket counterclockwise and pull it out.
3. Pull the bulb out without turning it.