

Instruments, Controls, & Other Features

Ignition Switch

Leaving the ignition switch ON with the engine stopped will drain the battery. Do not turn the key while riding.

Odometer

The display locks at 999,999.9 when the readout exceeds 999,999.9.

Document Bag

The owner's manual, registration, and insurance information can be stored in the plastic document bag located behind the battery maintenance cover.

Ignition Cut-off System

A banking (lean angle) sensor automatically stops the engine and fuel pump if the motorcycle falls over. To reset the sensor, you must turn the ignition switch to OFF and back to the ON position before the engine can be restarted.

High Beam Indicator

The high beam indicator will come on briefly due to the capacitor being discharged when the ignition switch is turned on immediately after the engine is stopped with the high beam.

Headlight

The headlight will come on briefly due to the capacitor being discharged when the headlight dimmer switch is operated immediately after the engine is stopped with the high beam.