


Indicators

If one of these indicators does not come on when it should, have your dealer check for problems.


 **High beam indicator**

 **Left turn signal indicator**

 **Right turn signal indicator**

 **Neutral indicator**
Comes on when the transmission is in Neutral.

 **High coolant temperature indicator**

 **PGM-FI (Programmed Fuel Injection) malfunction indicator lamp (MIL)**

Comes on briefly when the ignition switch is turned to ON position.

If it comes on while engine is running:  **P.79**

Comes on briefly when the ignition switch is turned to ON position.

If it comes on while riding:

 **P.78**

