

Maintenance Schedule

Items	Pre-ride Check ➤ P. 36	Frequency *1									Annual Check	Regular Replace	Refer to page	
		× 1,000 km	1	6	12	18	24	30	36					
		× 1,000 mi	0.6	4	8	12	16	20	24					
Fuel Line	🔧			I	I	I	I	I	I	I	I			-
Fuel Level		I												-
Throttle Operation	🔧	I		I	I	I	I	I	I	I	I			73
Air Cleaner *2	🔧					R				R				-
Crankcase Breather *3				C	C	C	C	C	C	C				74
Spark Plug				I	R	I	R	I	R					54
Valve Clearance	🔧							I						-
Engine Oil		I		R	R	R	R	R	R	R	R			59
Engine Oil Strainer Screen	🔧					C			C					-
Engine Idle Speed	🔧			I	I	I	I	I	I	I	I			-
Radiator Coolant *4		I				I		I		I	I		3 Years	61
Cooling System	🔧					I		I		I	I			-

Maintenance Level

- 🔧 : Intermediate. We recommend service by your dealer, unless you have the necessary tools and are mechanically skilled.
Procedures are provided in an official Honda Shop Manual.
- 🔧 : Technical. In the interest of safety, have your vehicle serviced by your dealer.

Maintenance Legend

- I : Inspect (clean, adjust, lubricate, or replace, if necessary)
C : Clean
L : Lubricate
R : Replace