

Indicators


If one of these indicators does not come on when it should, have your dealer check for problems.



Left turn signal indicator



Right turn signal indicator

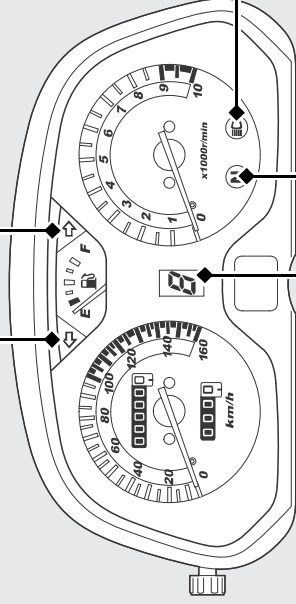

High beam indicator



Neutral indicator

Comes on when the transmission is in Neutral.

Gear position indicators

Shows 1st to 5th gear position.