

Starting the Engine *(Continued)*

Warm Engine:

- ① Do not use the choke.
- ② Start the engine following step ⑤ under "Cold Engine".

If the engine does not start:

- ① Open the throttle fully.
- ② Press the start button for 5 seconds.
- ③ Follow the normal starting procedure.
- ④ If the engine starts with unstable idle, open the throttle slightly.

If the engine does not start, wait for 10 seconds, then follow step 1-3 again.

| If Engine Will Not Start ➔ P. 73