














Maintenance Schedule

Items	Pre-ride Check  P. 32	Frequency *1										Annual Check	Regular Replace	Refer to page		
		x 1,000 km	1	4	8	12	16	20	24							
		x 1,000 mi	0.6	2.5	5	7.5	10	12.5	15							
Fuel Line			I	I	I	I	I	I	I	I	I	I			-	
Fuel Level		I														-
Fuel Strainer Screen			C	C	C	C	C	C	C	C	C	C				-
Throttle Operation		I	I	I	I	I	I	I	I	I	I	I			69	
Choke Operation			I	I	I	I	I	I	I	I	I	I				-
Air Cleaner *2										R						42
Crankcase Breather *3			C	C	C	C	C	C	C	C	C	C				70
Spark Plug			I	R	I	I	I	R	I	I	I	R				49
Valve Clearance			I	I	I	I	I	I	I	I	I	I				-
Engine Oil		I	R	R	R	R	R	R	R	R	R	R				51
Engine Oil Strainer Screen						C			C			C				-
Engine Oil Centrifugal filter						C			C			C				-
Engine Idle Speed			I	I	I	I	I	I	I	I	I	I				-
Secondary Air Supply System						I			I			I				-

Maintenance Level

 : Intermediate. We recommend service by your dealer, unless you have the necessary tools and are mechanically skilled. Procedures are provided in an official Honda Shop Manual.

 : Technical. In the interest of safety, have your motorcycle serviced by your dealer.

Maintenance Legend

I : Inspect (clean, adjust, lubricate, or replace, if necessary)
R : Replace
C : Clean
L : Lubricate