



## Brakes ► Adjusting the Front Brake Lever Freeplay

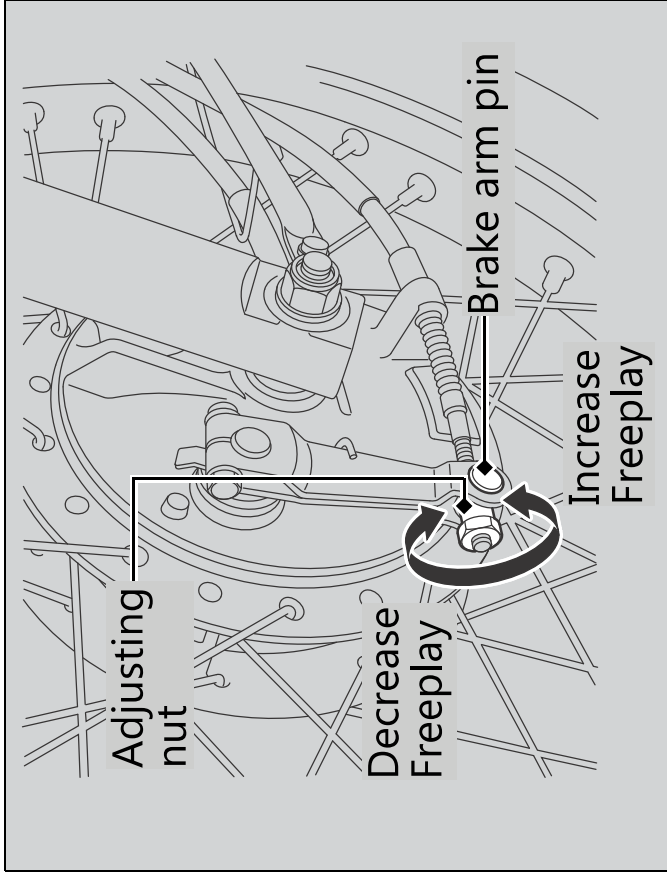

1. Adjust by turning the front brake adjusting nut a half-turn at a time.
2. Apply the brake several times and check for free wheel rotation after the brake lever is released.
3. Push the brake arm to confirm that there is a gap between the front brake adjusting nut and brake arm pin.

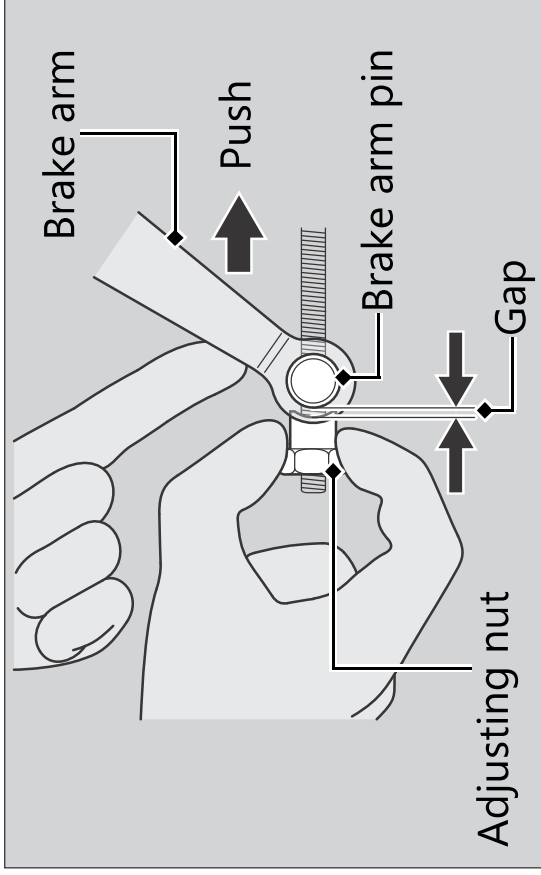

After adjustment, confirm the freeplay of the brake lever.  
Make sure the brake arm, spring and fastener are in good condition.

### NOTICE

Do not turn the adjuster beyond its natural limits.