


Tyre Puncture ► Removing Wheels

8. Remove the rear axle shaft, drive chain adjusters, side collars and rear wheel from the swingarm.

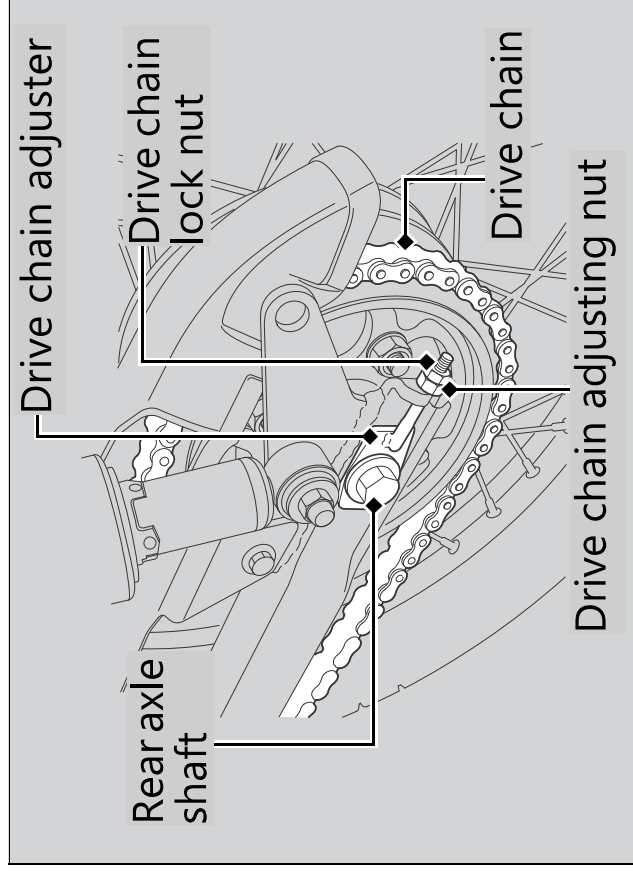

Installation

1. To install the rear wheel, reverse the removal procedure.
2. Tighten the rear axle nut.

Torque: 68 N·m (6.9 kgf·m, 50 lbf·ft)

3. Tighten the brake stopper arm nut.

Torque: 22 N·m (2.2 kgf·m, 16 lbf·ft)

4. Adjust the rear brake pedal freeplay. ► P. 58
5. Adjust the drive chain slack. ► P. 63
6. After installing the wheel, apply the brake pedal several times, then check if the wheel rotates freely. Recheck the wheel if the brake drags or if the wheel does not rotate freely.

If a torque wrench was not used for installation, see your dealer as soon as possible to verify proper assembly.

Improper assembly may lead to loss of braking capacity.

A used cotter pin may not effectively secure a fastener. Always replace a used cotter pin with a new one.