


Headlight Bulb

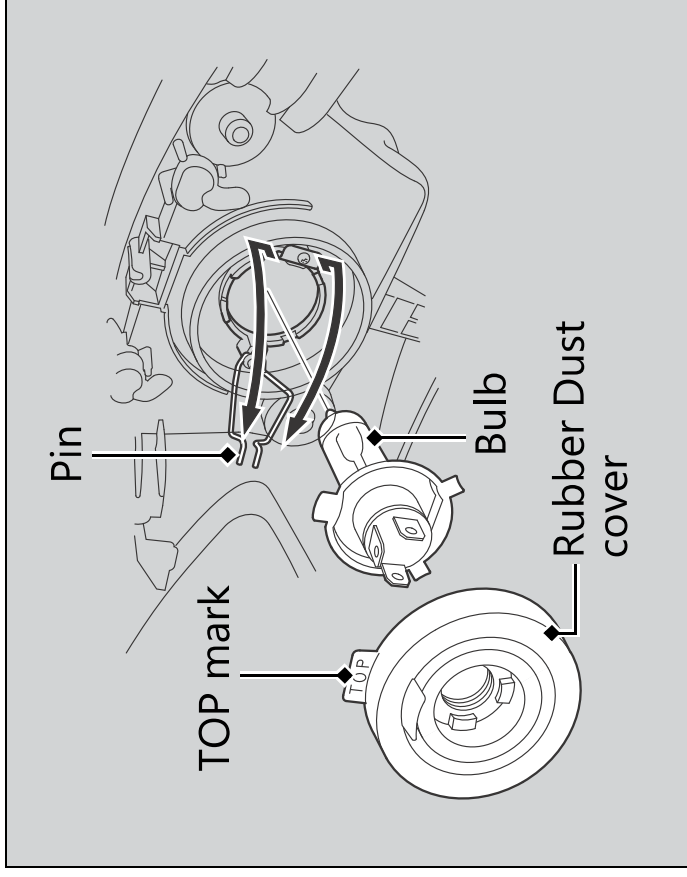

1. Remove the headlight case. ► P. 46
2. Remove the rubber dust cover.
3. Remove the bulb while pressing down on both ends of pin.
4. Install a new bulb and parts in the reverse order of removal.
 - Install the rubber dust cover with its TOP mark facing up.

Do not touch the glass surface with your fingers. If you touch the bulb with your bare hands, clean it with a cloth moistened with alcohol.