


Blown Fuse

Before handling fuses, see "Inspecting and Replacing Fuses." ► P. 35

Fuse Holders

1. Remove the left side cover. ► P. 47
2. Remove the fuse holders from the fuse holder cover.
3. Open the fuse holder and lift out the blown fuse with the clips.
4. Slide the blown fuse out of the clips.
5. Slide the clips onto the ends of spare fuse and push them back into the fuse holder. The spare fuse is attached to the fuse holder cover.
 - Always replace a blown fuse with a spare of the same rating.
6. Close the fuse holder and install it in the fuse holder cover.
7. Install the left side cover.

Do not pry the clips open to get a fuse out; you could bend them and cause poor contact with the new fuse. A loose fuse could cause damage to the electrical system and even start a fire.

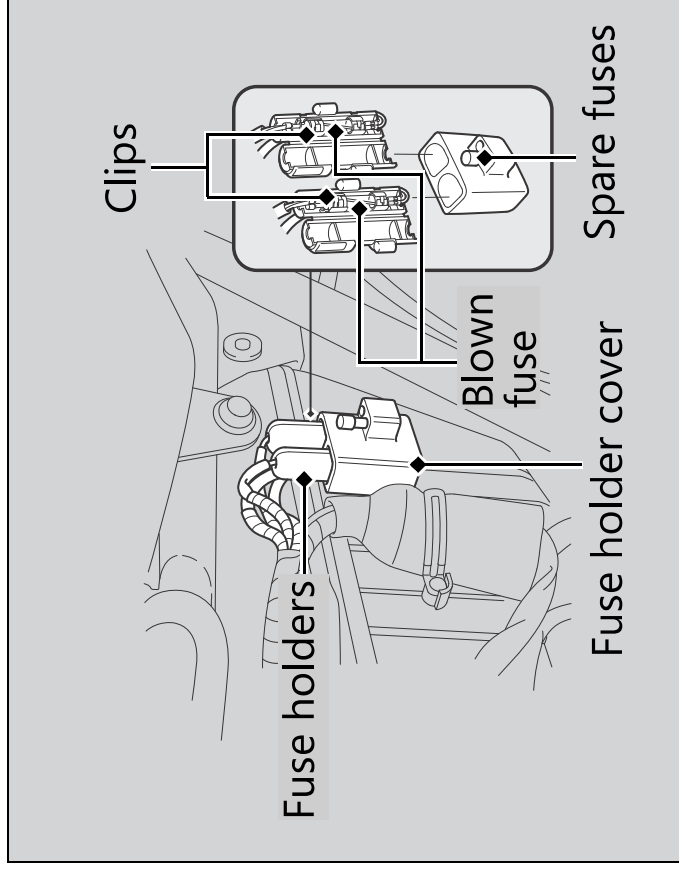

NOTICE

If a fuse fails repeatedly, you likely have an electrical problem. Have your motorcycle inspected by your dealer.