

Gauges & Indicators

(Models equipped with ABS)



Anti-Lock Brake System indicator (ABS) (amber)

Lights when there is any abnormality in the anti-lock brake system (ABS). Normally, this indicator comes on when the ignition switch is turned ON, and goes off after you ride the motorcycle at a speed above 6 mph (10 km/h). If the indicator comes on while riding, stop the motorcycle in a safe place and turn off the engine. Refer to *ABS Indicator*, [page 61](#) . For information about ABS, see [page 60](#) . *Lamp Check*.



high beam indicator (blue)

Lights when the headlight is on high beam.