

Controls & Features

Start Button



The start button is used for starting the engine. Pushing the button in starts the engine. See *Starting Procedure*, [page 53](#).

When the start button is pushed, the starter motor will crank the engine; the headlight will automatically go out, but the taillight will stay on.

The starter motor will not operate if the engine stop switch is in the OFF position when the start button is pushed.

Hazard Switch



The hazard switch is used to activate the hazard lights on your motorcycle if you need to stop near heavy traffic or if your motorcycle is disabled.

To operate, turn the ignition key to the ON or ACC position, and push the hazard switch. The front and rear turn signals will blink simultaneously until you push the switch again.

If you anticipate using the hazard system for an extended time, use the ACC position and turn off all unnecessary accessories to conserve battery capacity.

Be sure to turn the switch off when the hazard warning is no longer required, or the turn signals will not work properly and may confuse other drivers.