


## Tone Control

The tone (Bass — Treble) is automatically adjusted in accordance with the vehicle speed.

Bass:

To select the Bass control, push the MODE knob/button until “BASS” is displayed (page 71 ). Then, within 5 seconds, change the bass control.

- To emphasize bass — turn the MODE knob/button clockwise.
- To reduce bass — turn the MODE knob/button counterclockwise (Bass control ranges from 6 down to  $-6$ .)

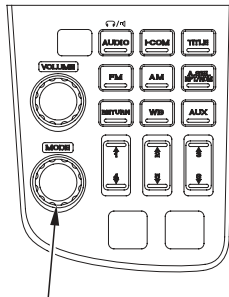

MODE knob/button

