

Maintenance Schedule

		FREQUENCY	ODOMETER READING (Note 1)							Refer to
			× 1,000 mi	4	8	12	16	20	24	
ITEM	NOTE	× 1,000 km	6.4	12.8	19.2	25.6	32.0	38.4	page	
			EMISSIONS-RELATED ITEMS	* FUEL LINE			I			I
* THROTTLE OPERATION				I		I		I	—	
* AIR CLEANER	2				R			R	—	
CRANKCASE BREATHER	3			C	C	C	C	C	149	
SPARK PLUGS				EVERY 16,000 mi (25,600 km) R						154
* VALVE CLEARANCE	4			EVERY 32,000 mi (51,200 km) I						—
ENGINE OIL	6			R		R		R	139	
ENGINE OIL FILTER				R		R		R	143	
* ENGINE IDLE SPEED				I		I		I	—	
RADIATOR COOLANT	5				I		I		R	146
* COOLING SYSTEM					I		I		I	—
* SECONDARY AIR SUPPLY SYSTEM					I		I		I	—
* EVAPORATIVE EMISSION CONTROL SYSTEM						I			I	—

* Should be serviced by your dealer, unless you have the proper tools and service data and are mechanically qualified. Refer to the official Honda Service Manual ([page 230](#)).