

# Cover Removal

---

## Engine Side Cover Removal

Refer to *Safety Precautions* on [page 118](#).

The left engine side cover must be removed for coolant maintenance.  
The right engine side cover must be removed for engine oil and rear brake fluid maintenance.

### NOTICE

*Failure to use extreme care removing or installing the side covers may damage the side cover prongs.*

#### Removal

1. Carefully pull the rear of the engine side cover out until the prongs are clear of their securing grommets.
2. Remove the engine side cover backward.

#### Installation

- Installation can be done in the reverse order of removal.

#### LEFT SIDE

