

Basic Operation & Riding

This section gives basic riding instructions, including how to start and stop your engine, and how to use the throttle, clutch, and brakes. It also provides important information on riding with a passenger or cargo, and operating your cruise control.

To protect your new engine and enjoy optimum performance and service life, refer to Break-in Guidelines ([page 226](#)).

To protect the catalytic converters in your motorcycle's exhaust system, avoid extended idling and the use of leaded gasoline.

Safe Riding Precautions	54
Starting & Stopping the Engine	55
Preparation	55
Starting Procedure	56
Flooded Engine	56
Bank Angle Sensor Ignition Cut-off System	57
How to Stop the Engine	57
Shifting Gears.....	58
While You Are Riding	59
Braking.....	60
Combined ABS	62
ABS Indicator Light.....	63
Parking	65
Theft-prevention Tips.....	67
Riding with a Passenger or Cargo	68
Riding with Cruise Control	69
Cruise Control	69
To Set Cruise Control.....	70
To Change the Set Speed	70
To Cancel Cruise Control.....	71
Riding in Bad Weather	72