


# iPod® /USB Flash Drive

You can select repeat and random play modes when playing a file.

## To select a play mode

Push the A.SEL RPT/RDM button until the desired play mode is displayed. The display changes as follows each time the A.SEL RPT/RDM button is pushed.

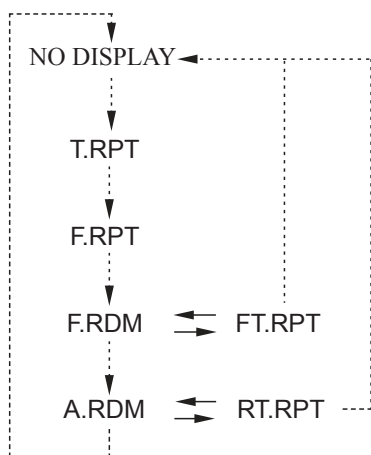

Push the A.SEL RPT/RDM button: ----->

Push and hold the A.SEL RPT/RDM button: —————>

## Play Mode Menu Items

MODE	Function
T.RPT	Repeats the current file.
F.RPT	Repeats all files in the current folder.
F.RDM	Plays all files in the current folder in random order.
A.RDM	Plays all files in random order.
FT.RPT	Repeats current file in F.RDM play mode.
RT.RPT	Repeats current file in A.RDM play mode.