

# Maintenance Schedule

---

If you do not feel capable of performing a given task or need assistance, remember that your Honda dealer knows your motorcycle best and is fully equipped to maintain and repair it. If you decide to do your own maintenance, use only Honda Genuine Parts or their equivalents for repair or replacement to ensure the best quality and reliability.

Perform the pre-ride inspection ([page 41](#)) and owner maintenance ([page 126](#)) at each scheduled maintenance period.

The following items require some mechanical knowledge. Certain items (particularly those marked \* and \*\*) may require more technical information and tools. Consult your dealer.

\* Should be serviced by your dealer, unless you have the proper tools and service data and are mechanically qualified. Refer to the official Honda Service Manual ([page 234](#)).

\*\*In the interest of safety, we recommend these items be serviced only by your dealer.

## *Summary of Maintenance Schedule Notes & Procedures:*

### NOTES:

1. At higher odometer readings, repeat at the frequency interval established here.
2. Service more frequently if the motorcycle is ridden in unusually wet or dusty areas.
3. Service more frequently if the motorcycle is ridden often at full throttle or in the rain.
4. Service more frequently if noisy.
5. Replace every 2 years, or at indicated odometer interval, whichever comes first. Replacement requires mechanical skill.
6. Replace at 4,000 mi (6,400 km) or 6 months, then every 8,000 mi (12,800 km) or 12 months.

### Maintenance Procedures:

- I: inspect and clean, adjust, lubricate,  
or replace, if necessary
- C: clean
- A: adjust
- L: lubricate
- R: replace