

# Maintenance Schedule

ITEM		FREQUENCY		ODOMETER READING (Note 1)							Refer to page
		NOTE	×1,000 mi	4	8	12	16	20	24		
			×1,000 km	6.4	12.8	19.2	25.6	32.0	38.4		
NON-EMISSIONS-RELATED ITEMS		FINAL DRIVE OIL			I		I		R	154	
		BRAKE FLUID	5		I	I	R	I	I	R	163
		BRAKE PADS WEAR			I	I	I	I	I	I	165
		BRAKE SYSTEM				I		I		I	166
	*	BRAKELIGHT SWITCH				I		I		I	–
	*	HEADLIGHT AIM				I		I		I	–
		CLUTCH SYSTEM				I		I		I	156
		CLUTCH FLUID	5		I	I	R	I	I	R	157
		SIDE STAND				I		I		I	174
	*	SUSPENSION				I		I		I	–
	*	NUTS, BOLTS, FASTENERS				I		I		I	–
	**	WHEELS/TIRES				I		I		I	–
	**	STEERING HEAD BEARINGS				I		I		I	–

- \* Should be serviced by your dealer, unless you have the proper tools and service data and are mechanically qualified. Refer to the official Honda Service Manual ([page 234](#)).
- \*\* In the interest of safety, we recommend these items be serviced only by your dealer.