

Never use stale or contaminated gasoline or an oil/gasoline mixture. Avoid getting dirt, dust, or water in the fuel tank.


Fuel Capacity

Fuel tank capacity, including reserve:
6.6 US gal (25 ℓ)

The tank should be refilled as soon as possible when the fuel gauge needle enters the red band.

Refueling Procedure

Refer to *Safety Precautions* on [page 122](#).

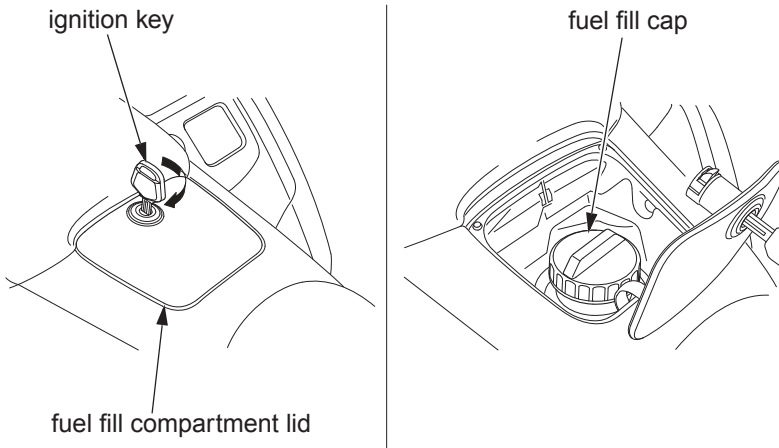

1. Insert the ignition key in the fuel fill compartment lid and turn it clockwise.
2. Open the fuel fill compartment lid.
3. Turn the fuel fill cap counterclockwise and remove it.

(cont'd)