


Engine Oil & Filter

Checking & Adding Oil

Refer to *Safety Precautions* on [page 122](#).

RIGHT SIDE

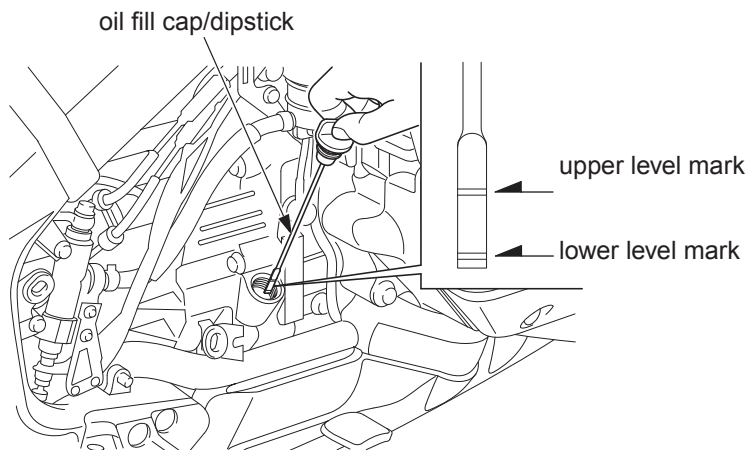

(Models equipped with center stand)

1. Park your motorcycle on its center stand on a firm, level surface.

(Models not equipped with center stand)

1. Park your motorcycle on its side stand on a firm, level surface.
2. Remove the right engine side cover ([page 136](#)).
3. Start the engine and let it idle for 3 – 5 minutes. Make sure the low oil pressure indicator goes off. If the indicator remains on, stop the engine immediately.
4. Stop the engine and wait 2– 3 minutes.

(Models not equipped with center stand)

5. Hold the motorcycle in an upright position.
6. Remove the oil fill cap/dipstick and wipe it clean.
7. Insert the oil fill cap/dipstick until it seats, but don't screw it in.
8. Remove the oil fill cap/dipstick and check the oil level.
 - If the oil is at or near the upper level mark — you do not have to add oil.
 - If the oil is below or near the lower level mark — add the recommended oil until it reaches the upper level mark. (Do not overfill.)
9. Reinstall the oil fill cap/dipstick.
10. Reinstall the right engine side cover.
11. Check for oil leaks.