


Basic Operations

You can operate and set the various functions of the audio system using the interface dial and buttons on the center panel and/or switches on the left handlebar. However, you cannot operate some functions by the center panel switches/Interface dial while the motorcycle is in motion.

Center Panel

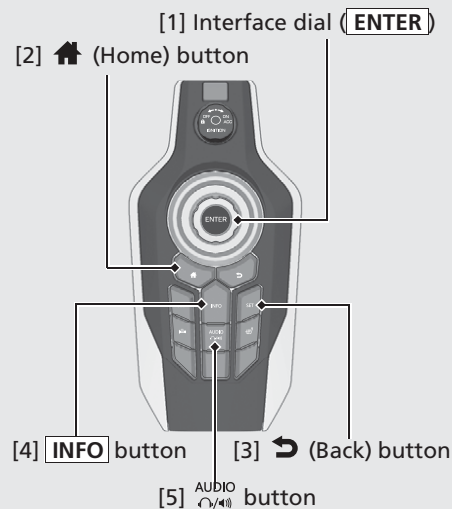

[1] (Interface dial): Rotate or move in the eight possible directions to select the available choices. Press to set your selection.

- When listening to the radio
 - Rotate or move : Switches to a higher-frequency
 - Rotate or move : Switches to a lower-frequency
 - Move and hold: Selects the next station with strong reception.
 - Move and hold: Selects the previous station with strong reception.
 - Move : Selects the next preset radio station.
 - Move : Selects the previous preset radio station.
- When listening to an iPod, USB flash drive or *Bluetooth*[®] audio
 - Move : Skips to the next song.
 - Move : Goes back to the beginning of the current or previous song.
- When listening to a USB flash drive
 - Move and hold: Skips to the next folder.
 - Move and hold: Goes back to the previous folder.

[2] (Home) button: Select to go to the home screen.

[3] (Back) button: Press to go return the previous screen.

[4] (INFO) button: Press to switch the information displayed on the information bar.

[5] (AUDIO) button: Press to switch the audio output between the paired *Bluetooth*[®] headsets and the speakers.