

Gauges & Indicators

(Models equipped with ABS)



Anti-Lock Brake System indicator (ABS) (amber)

Lights when there is any abnormality in the anti-lock brake system (ABS). Normally, this indicator comes on when the ignition switch is turned ON, and goes off after you ride the motorcycle at a speed above 6 mph (10 km/h). If the indicator comes on while riding, stop the motorcycle in a safe place and turn off the engine. Refer to *ABS Indicator*, [page 81](#). For information about ABS, see [page 80](#). *Lamp Check*.

**CRUISE
ON**

CRUISE ON indicator (amber)

Lights when the CRUISE CONTROL master switch is on.

**CRUISE
SET**

CRUISE SET indicator (green)

Lights when the cruise control SET/DECEL switch is on.



high beam indicator (blue)

Lights when the headlight is on high beam.



side stand indicator (amber)

Lights when the side stand is put down—to indicate that the side stand ignition cut-off system ([page 71](#)) is activated.