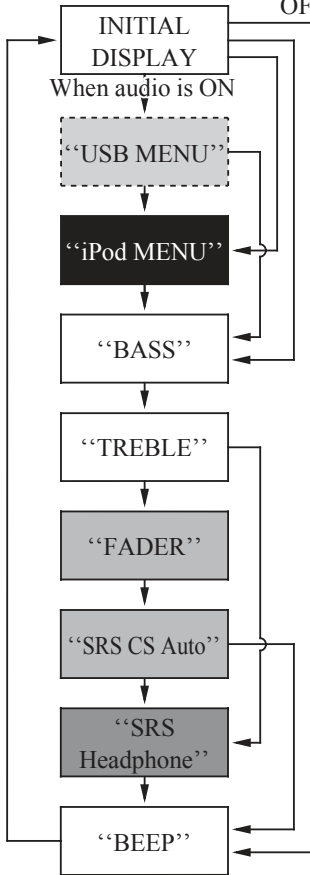


MODE Knob/Button Function

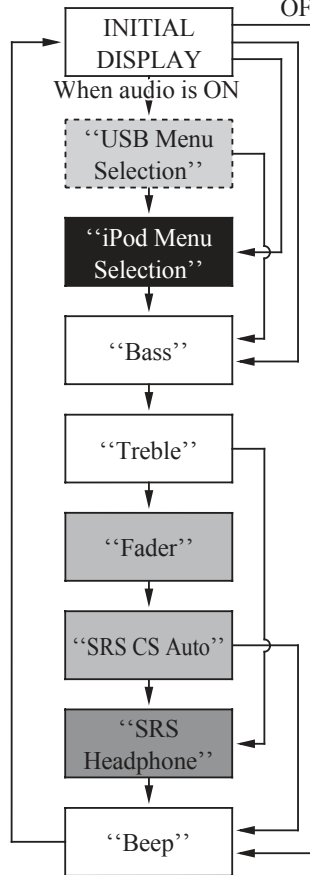
(Models not equipped with Navigation System)

When audio is OFF

 


 
(Models equipped with Navigation System)

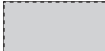
When audio is OFF




● —————> Push the MODE Knob/Button

●  When the speaker is used

●  When the headset is used

●  When USB flash drive is used

●  When iPod® is used