

Audio Systems

Auto Volume Control (AVC)

To automatically increase volume as the speed of the motorcycle increases. Push the VOLUME knob/button until “AUTO VOL SPK” (“Auto Speaker Vol”) is displayed (page 98). To select the volume control of headset, push the VOLUME knob/button until “AUTO VOL HS” (“Auto Headset Vol”) is displayed (page 98). Then, within 5 seconds, change the AVC setting.


AUTO VOL SPK has four settings – HI (High), MID (Mid), LO (Low), and OFF (Off).

AUTO VOL HS has three settings – HI (High), LO (Low), and OFF (Off).


(Models not equipped with Navigation System)

(Models equipped with Navigation System)

VOLUME knob/button

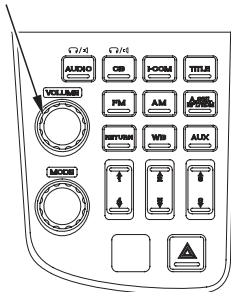

VOLUME knob/button

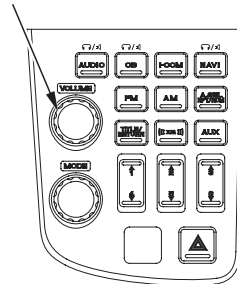

AUTO VOL SPK
MID

Auto Speaker Vol

Off Low Mid High

AUTO VOL HS
OFF

Auto Headset Vol

Off Low High