

# AM/FM Radio

## Select Band

(Models not equipped with Navigation System)

Push the FM button to switch to FM1/FM2.

Push the AM button to listen to AM.

(Models equipped with Navigation System)


Push the FM button to switch to FM1/FM2.

Push the AM button to switch to AM/WB (USA only).

Push the AM button to listen to AM (Canada only).

Reception of a stereo signal is indicated when the STEREO indicator appears in the display. (Stereo reception is available only for FM stereo broadcasts.) As FM stereo reception becomes weaker, special circuits in the radio gradually blend the sound toward mono to maintain some sound quality, even though the STEREO indicator remains ON.


(Models not equipped with Navigation System)

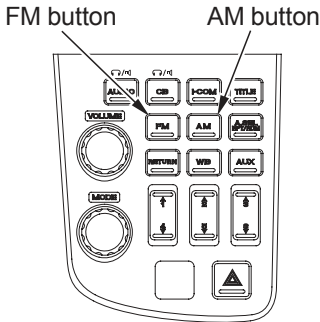

STEREO indicator



(Models equipped with Navigation System)

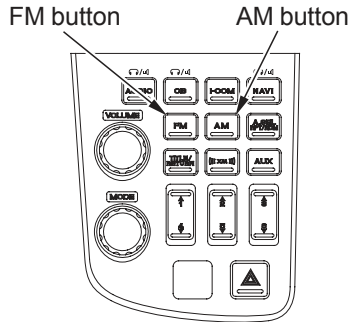

STEREO indicator

