


# Clip Removal

---

## Removal

1. Press down on the center pin to release the lock.
2. Pull the clip out of the hole.

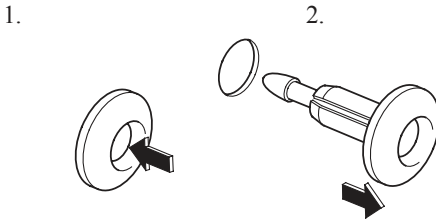

## Installation

1. Push the bottom of the pin.
2. Insert the clip into the hole.
3. Lightly press down on the center pin to lock the clip.

