

If a Fuse Blows

Main Fuse Access:

4. Check the two main fuses (A & B) to see if they are blown.
To replace main fuses (A & B), see your dealer for this service.

Speed Limiter Fuse Access:

5. Check the speed limiter (reverse system) fuse to see if it's blown, see your dealer for this service.

Circuit Fuses Access:

6. To check or replace a circuit fuse, pull the old fuse out of its retaining clips with the fuse remover. Look for a burned wire inside the fuse. If the fuse is blown, replace it with a spare fuse of the same rating.

If you do not have a replacement fuse with the proper rating for the circuit, install one with a lower rating.

NOTICE

Replacing a fuse with one that has a higher rating greatly increases the chance of damage to the electrical system.

External Amplifier Fuse Access:

7. To replace the external amplifier fuse, see your dealer for this service.

(cont'd)