

Tone Control


The tone (Bass – Treble) is automatically adjusted in accordance with the vehicle speed.

Bass:

To select the Bass control, push the MODE knob/button until “BASS” (“Bass”) is displayed (page 97). Then, within 5 seconds, change the bass control.


- To emphasize bass — turn the MODE knob/button clockwise.
- To reduce bass — turn the MODE knob/button counterclockwise.
(Bass control ranges from 6 down to -6.)

(Models not equipped with Navigation System)

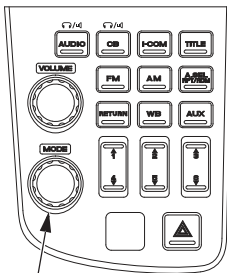

MODE knob/button

(Models equipped with Navigation System)

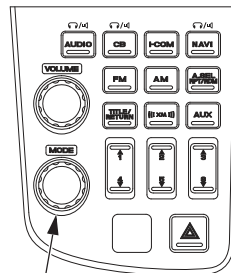

MODE knob/button

