
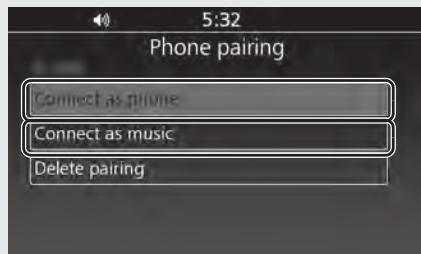



To connect functions:

- 4 [Phone pairing]  
 Select [Connect as phone] or [Connect as music], and then press  or **ENT** switch.




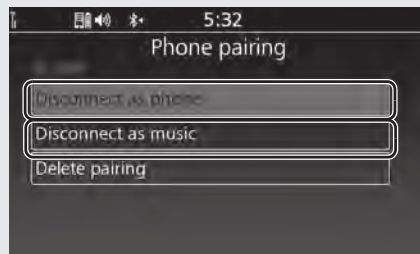
[Rider HS pairing] / [Passenger HS pairing]  
 Select [Connect], and then press  or **ENT** switch.




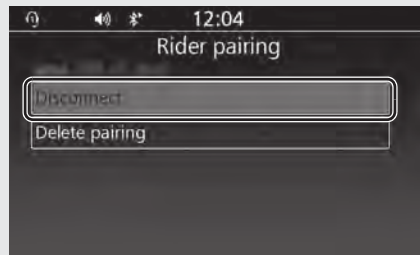
- 5 Icon of selected function next to the name of the device turns on.

To disconnect functions:

- 4 [Phone pairing]  
 Select [Disconnect as phone] or [Disconnect as music], and then press  or **ENT** switch.



[Rider HS pairing] / [Passenger HS pairing]  
 Select [Disconnect], and then press  or **ENT** switch.



- 5 Icon of selected function next to the name of the device turns off.