


Instruments *(Continued)*

■ Odometer [TOTAL] & Tripmeter [TRIP A/B] Display

To select Odometer or Tripmeter A or B, Press **SEL** button when the cursor is at the Odometer and Tripmeter display.

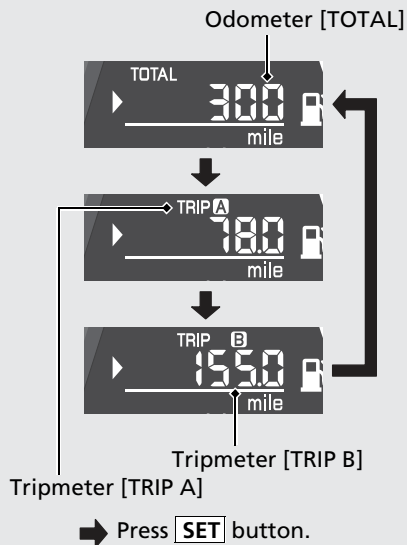

- 1 Press **SEL** button to move the cursor to the odometer, tripmeter A and tripmeter B display.
- 2 Press **SET** button to select the odometer, tripmeter A or tripmeter B.

Odometer [TOTAL]

Total distance ridden.

When "-----" is displayed, go to your dealer for service.

Tripmeter A/B [TRIP A/B]


Distance ridden since the tripmeter was reset.

When "----.-" is displayed, go to your dealer for service.

To reset the tripmeter: **→ P. 36**

■ To Reset the Tripmeter and Average Fuel Mileage

To reset tripmeter A and average fuel mileage (based on tripmeter A), press and hold the **SET** button while tripmeter A is displayed.

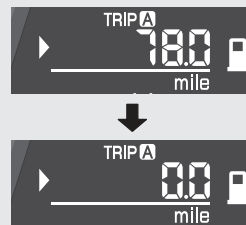

To reset tripmeter B and average fuel mileage (based on tripmeter B), press and hold the **SET** button while tripmeter B is displayed.

