

Walking Speed Mode

GL1800BD/D/DA

The Walking Speed mode assists the rider with getting the vehicle into or out of tight areas by maneuvering the vehicle at slow speed.

► Operate the vehicle's engine only in a well-ventilated area.

Make sure there are no obstacles or people in the area. Avoid steep or uneven surfaces. Carrying a passenger while in Walking Speed mode is not recommended because it makes balance and control more difficult to maintain.

- 1 Sit astride the vehicle, in your normal riding position, with both feet on the ground.
- 2 Make sure the transmission is in neutral (N) indicator comes on) and the side stand is up.
- 3 Start the engine. ➡ P.112

- 4 Press the Walking Speed mode switch while applying the brake lever or pedal. The Walking Speed mode indicator is displayed.

