

# Troubleshooting

<b>Engine Will Not Start</b> .....	P. 177	Low Tire Pressure Indicator.....	P. 181	<b>When the Honda SMART Key System Does Not Operate Properly</b> .....	P. 188
<b>Overheating (High coolant temperature indicator is on)</b> .....	P. 178	TPMS Indicator.....	P. 182	<b>Activating the Electrical System in an Emergency</b> .....	P. 189
<b>Warning Indicators On or Flashing</b> .....	P. 179	AIRBAG Indicator <b>GL1800DA</b> .....	P. 182	<b>If the Saddlebags or Travel Trunk Won't Open</b> ...	P. 191
Low Oil Pressure Indicator.....	P. 179	<b>Other Warning Indications</b> .....	P. 183	<b>Tire Puncture</b> .....	P. 193
PGM-FI (Programmed Fuel Injection)		Fuel Gauge Failure Indication.....	P. 183	<b>Audio System Trouble</b> .....	P. 199
Malfunction Indicator Lamp (MIL).....	P. 179	Handle Grip Heater Failure Indication ...	P. 183	<b>Electrical Trouble</b> .....	P. 207
Combined ABS Indicator.....	P. 179	Seat Heaters Failure Indication		Battery Goes Dead.....	P. 207
Torque Control Indicator		<b>GL1800/D/DA</b> .....	P. 184	Burned-out Light Bulb.....	P. 207
<b>GL1800/D/DA</b> .....	P. 180	Coolant Temperature Gauge Failure Indication ...	P. 184	Blown Fuse.....	P. 209
Honda SMART Key Indicator.....	P. 180	<b>If the “-” is Blinking in the Gear Position Indicator While Riding (GL1800BD/D/DA)</b> .....	P. 185		
Clutch Temperature Indicator		<b>When the Idling Stop System Does Not Operate Properly (GL1800BD/D/DA Canada model)</b> ...	P. 186		
<b>GL1800BD/D/DA</b> .....	P. 181				